


INSTRUCTION INSERT

FRONT

OXO
GOOD GRIPS®
POP Canisters



www.oxo.com

BACK

CLEANING INSTRUCTIONS:

1. Make sure button is up when assembling and disassembling lid.
2. Remove bottom of lid by twisting in direction of arrows.
3. Remove plastic insert.
4. Remove silicone gasket from bottom of lid.
5. Silicone gasket is dishwasher safe. Hand wash all other parts.
6. Follow instructions in reverse to reassemble lid after washing and drying.

NOTE: Make sure to insert silicone gasket in correct position when reassembling.

OXO POP Canisters are intended for dry food storage; microwave use not recommended. Canisters are safe for refrigerator and freezer use; however when exposed to extreme temperature fluctuations the Canister lid may lift due to changes in air pressure.