Instruction Insert

INSTRUCTIONS FOR USE

- To set timer, press any button to enter timer mode.
 A timer icon will appear on the LCD screen. Press the ▲ and ▼ buttons to set the timer. Hold down the ▲ and ▼ buttons to move the digits quickly.
 Press start to begin timing.

Continued >

- To reset timer to last setting used, press clear/ memory and timer with switch to the most recent time set. Press start/stop to begin countdown.
- When countdown is complete, timer will beep continuously for 1 minute, display will flash and the timer will begin counting up until a button is pressed. If a button is not pressed after 1 minute, timer will beep twice every 30 seconds for 10 minutes. Timer will no longer beep after 10 minutes, but display will continue flashing and counting up.
- To clear the timer setting, make sure the timer is stopped and press the clear/memory button to return to 00.00.
- If no timer settings are pressed in 30 minutes, timer will revert to clock display.

Requires one CR2032 battery (included)