



 
GOOD GRIPS®

**11lb FOOD SCALE
WITH PULL-OUT DISPLAY**



OXO's user-friendly Food Scale with Pull-Out Display is perfect for weighing all ingredients. Weigh items directly on the platform, on a plate, or in a bowl, and pull the display away from the base for better visibility. Accurately measure ingredients when cooking or baking. Stick to a diet by weighing portions. Weigh fruits, vegetables, flour, sugar, coffee, meats, cheeses and more, but before you get started, please familiarize yourself with the many features of this useful Scale.

FEATURES

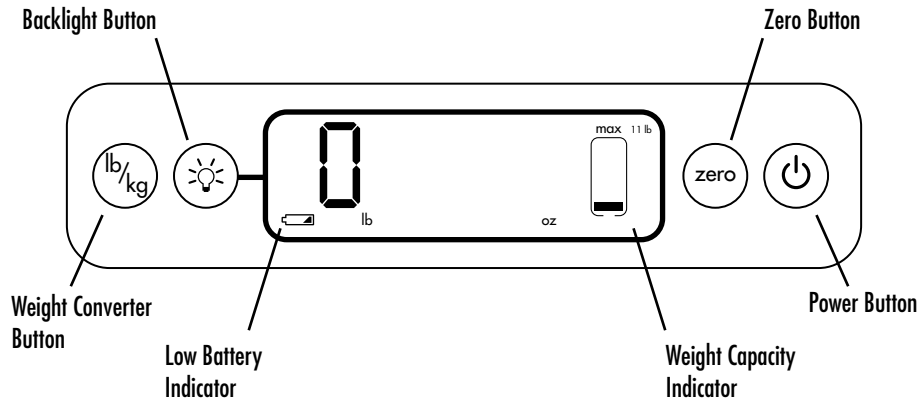

Battery Loading

(Four AAA batteries included)
Battery compartment is located on bottom of Scale. Push tab in and lift battery door to remove. Ensure + / - ends of batteries line up with + / - symbols in battery compartment. Replace battery door.

Power Button

Press power button to turn on and off. Display will count down 3-2-1 and will show 0 lb or 0 kg when ready for use.

Zero Button

Press zero button to zero-out Scale before adding additional ingredients.

Weight Converter Button

To switch between US (lb and oz) and metric (kg and g) units at any time during weighing, press the lb/kg button.

Backlight Option

For better visibility, the backlight can be turned on by pressing the backlight button. To preserve battery life, the backlight will turn off after 30 seconds.

Weight Capacity Indicator

As weight begins to accumulate on Scale, a weight capacity indicator will appear on right side of display window. The indicator shows the used capacity of the Scale between 0 and 11lbs (or 0 and 5kg). When maximum capacity is reached, all bars in the indicator will flash and Err will appear on display. To protect Scale, remove excess weight immediately.

Low Battery Indicator

The low battery symbol will appear in the lower left corner when batteries need to be changed. This symbol will only appear when battery is low.

USE

Standby Mode

After 6 minutes of inactivity display will switch to standby mode and the memory will be retained. Touch any button after 6 minutes to return Scale to active mode again.

Auto Shut Off

After 30 minutes of inactivity Scale will shut off and the memory will be lost. To turn the power on again, press the power button.

Manual Shut Off

To turn Scale off manually, press the power button until display is blank.

Pull-Out Display

Display unit can be pulled away from base unit for better visibility when a large container is placed on the platform. Simply pull on the front tab and position display unit in front of base unit. To retract, reposition display unit in base and magnets will secure it in place.

CARE

Cleaning

Gently lift and pull stainless steel platform off base unit to remove for cleaning. To reattach platform, line up tabs on the bottom of platform with holes in base unit and push platform back into place. Do not put platform or base unit in dishwasher.

 
Storage

Do not place heavy objects on top of Scale during storage. Doing so may affect the accuracy of the Scale.


Zeroing and Add & Weigh Operation

To weigh ingredients in a container, press the zero button to offset the weight of the container, so that only the weight of the ingredients to be added is displayed.


The zero button can also be used to weigh multiple ingredients consecutively without removing items from the Scale. Pressing zero will zero-out the Scale before adding a new ingredient.

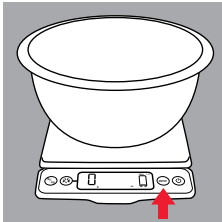

 Add container to Scale, then press zero button to set weight to zero.

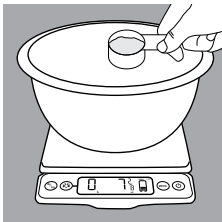

 Add ingredients and weight will appear on display.

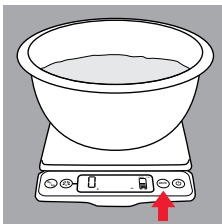

Press zero to reset display back to zero again and continue to add ingredients until complete or until maximum capacity is reached.

After container is removed from Scale, a negative number will appear on the display. To reset Scale back to zero for a new measurement, press zero and weigh directly on platform or add a new container and press zero again.

**Satisfaction
Guaranteed**

800.545.4411

www.oxo.com