

Nest™ Booster Seat with Straps

Instruction Manual

IMPORTANT! KEEP FOR FUTURE REFERENCE



Congratulations on your OXO Tot Nest™ Booster Seat, a Booster that brings kids to the family table from as young as nine months. We designed the Nest™ with a soft, removable cushion, as well as a high back and sides, to make any grown-up chair comfortable for your little one. We also made it easy to clean and store so after-meal tidying is comfortable for you, too.


Every OXO Tot product, from our booster seats to our sippy cups, is tested in real homes with real parents and children (including our own!) to ensure they're up for life's everyday adventures.

Please read instructions carefully before using your Nest Booster Seat.

CONTENTS

Assembling Booster Seat	4
Included	4
Attaching Booster to Chair	4
Strapping Child into Booster.....	5
Removing and Storing Booster Straps	6
Reattaching Booster Straps.....	6
Care, Cleaning & Storage.....	7
Replacement Parts	7
Limited Warranty	7
Registration	7
Contact Us.....	8
Notes	9

ASSEMBLING THE BOOSTER SEAT

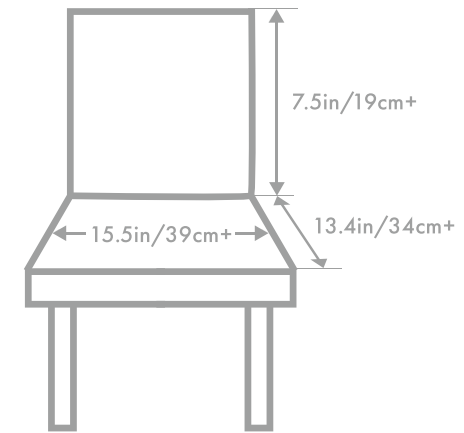


⚠ WARNING

Failure to follow these warnings and the assembly instructions could result in serious injury or death.


- Prevent serious injury or death from sliding out, falls or tipping over. Children have suffered head injuries, including skull fractures, after falling with or from booster seats.
- ALWAYS secure child with the restraint system adjusted to fit child snugly. Use the restraint system until child is able to get in and out of the product without help (around 2 ½ years old). Adjust to fit snugly.
- Stay near and watch your child during use.
- NEVER allow child to push away from a wall or table.
- ALWAYS secure BOTH chair back and chair bottom straps when using on an elevated adult chair.
- NEVER use on table, countertop, stool or swivel chair.
- NEVER lift and carry with child in booster seat.
- NEVER use in a motor vehicle or as a bath seat.
- Before each use, always check to be sure the product is properly secured to an adult chair.
- Discontinue use of Booster Seat when child's weight exceeds 50 lbs (23 kg).
- For your child's safety, read the labels and the owner's manual before using the product.
- Follow assembly instructions carefully. If you experience any difficulties, please contact our customer service department at 1-800-545-4411 or 0114 290 1455(UK). Outside U.S. and UK contact your local distributor or info@oxo.com. DO NOT substitute parts.
- Save this owner's manual for future use.

ASSEMBLY

Included

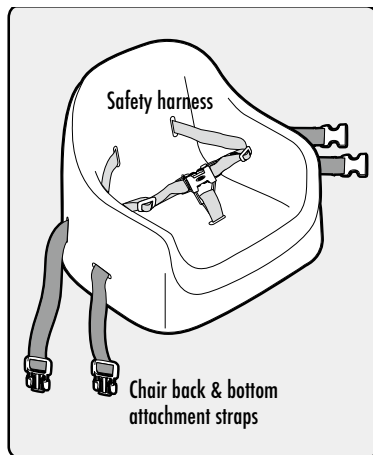


Booster comes with chair back and bottom attachment straps and safety harness attached. Unbuckle all buckles before beginning attachment.

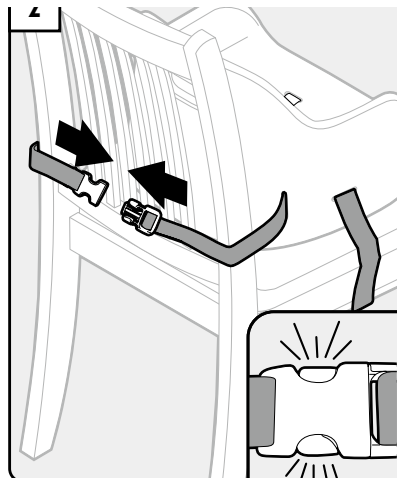


Wrap chair back attachment straps around chair back and buckle behind seat. You will hear a "click" when buckle locks.

Attaching Booster to Chair

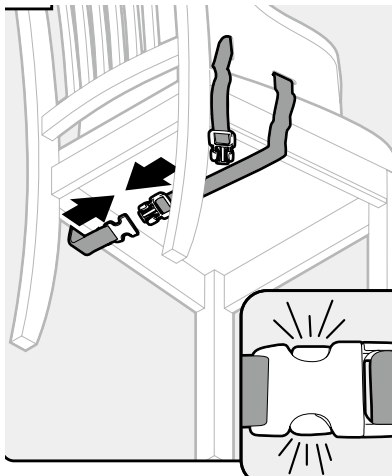

Position Booster securely on chair as far back on seat as possible. Wrap chair bottom attachment strap around base of chair and buckle under seat. You will hear a "click" when buckle locks.

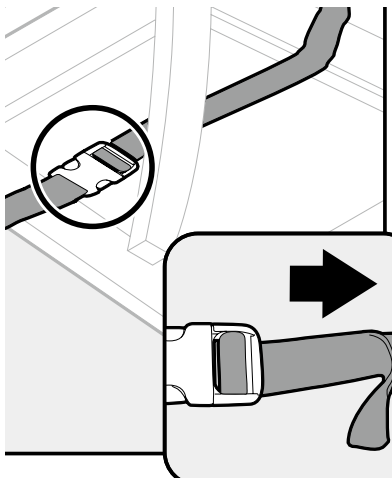

Ensure both sets of straps are tight by adjusting the straps until there is no slack. Pull loose end of strap to tighten.


Strapping Child into Booster



Test Booster attachment to ensure it is securely attached to chair.

Release safety harness by unbuckling two waist straps from crotch strap. Place child on Booster and place crotch strap between child's legs. Buckle two waist straps into crotch strap buckle. You will hear a "click" when buckles lock.

Note: Pull on harness to check that both belts are locked into the buckle.

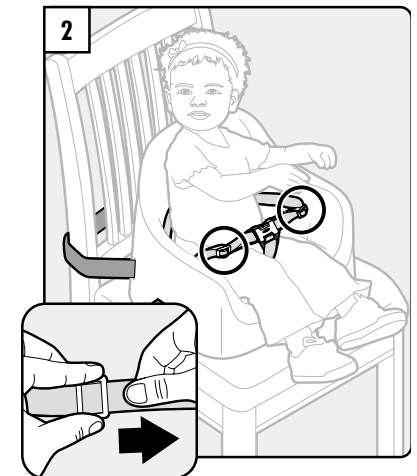

Adjust waist straps until child is snug in Booster. To loosen, slide the strap adjusters towards the center. To tighten, slide the strap adjusters away from the center. To remove child, release buckles by unbuckling two waist straps from crotch strap.

Test strap security after adjusting straps. Do not leave child unattended.

⚠ WARNING

Only use on chairs that have a back. Never use on table, countertop, stool or swivel chair.


⚠ WARNING

• Always secure child with the restraint system to fit child snugly. Do not remove chair straps. All straps can be removed for Booster storage.

Removing and Storing Booster Straps




Remove Booster from chair by unbuckling chair bottom and chair back attachment straps. Before removing straps from Booster, buckle all chair attachment and harness buckles. This will ensure straps stay together for storage. To remove straps, flip Booster over and push t-straps through slots. Pull on the other end of straps to remove.

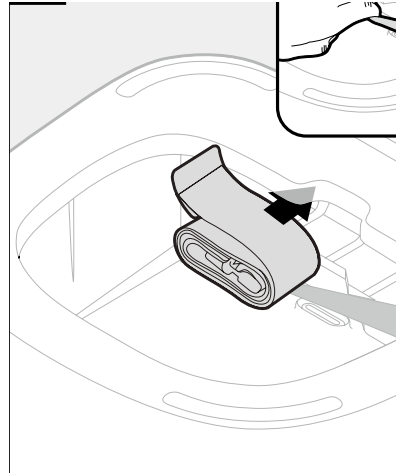


Roll all straps up and place in elastic pocket on underside of Booster.

Removing Cushion

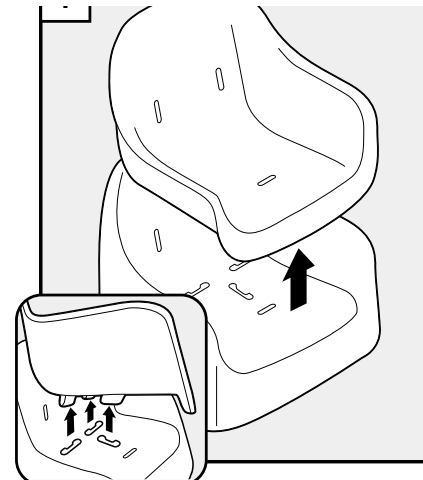


To remove cushion for cleaning, first remove waist and crotch straps. Pull up to unfasten the cushion from the chair. Wipe clean or hand wash. **WARNING:** Do not place cushion in dishwasher or washing machine. Material will shrink and not fit on the chair properly.

Replacing Cushion

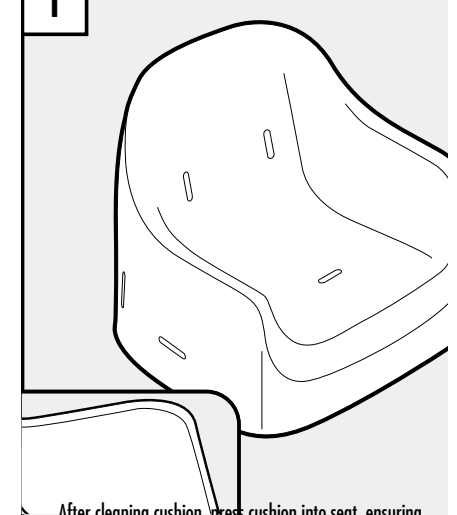


After cleaning cushion, press cushion into seat, ensuring all three t-straps snap into their holes. Press down to secure. Gently pull on cushion to test security before next use.

Reattaching Booster Straps

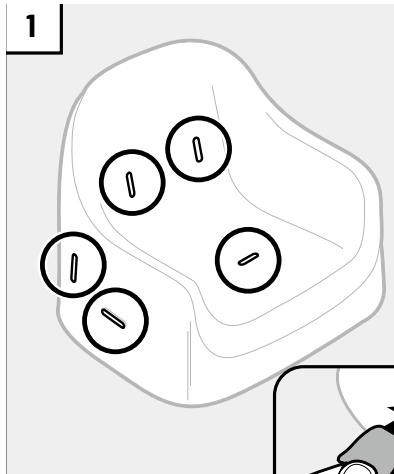

To reattach waist and crotch straps, push t-straps through slots in the seat cushion. Push chair back and chair bottom attachment straps through slots on back and sides of Booster.

Note: Chair back and chair bottom attachment straps are interchangeable.

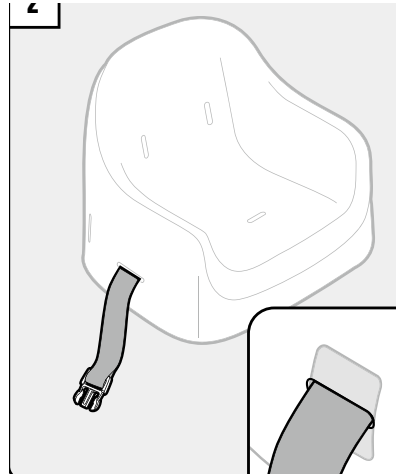

Pull on straps to ensure that the t-straps are secure and will not go through the slot.

CARE, CLEANING & STORAGE

CARE

- Before each use, always check to be sure the product is properly secured to an adult chair
- Booster Seat is not for outdoor use
- Protect from excessive exposure to water and moisture
- Discontinue use of Booster Seat if parts are missing, damaged or broken

CLEANING

- All parts are surface wash only
- Wash with mild soap and water; rinse with clean water and wipe dry
- Do not use abrasive cleaners or scrubbing pads
- Do not put cushion in dishwasher or washing machine

STORAGE

- Store all parts in a cool, dry location
- Do not store or use outside or where Booster Seat can be exposed to moisture or water

REPLACEMENT PARTS

If parts are missing, damaged or broken, contact OXO Customer Service. See page 8 for contact information.

LIMITED WARRANTY

OXO warrants that this product is free from defects in workmanship for two years from the date of purchase. A receipt indicating the purchase date is required for warranty claims. This warranty does NOT cover damage resulting from normal wear and tear, accident, misuse, abuse, alterations, attempts at repair or use with unauthorized attachments or the failure to follow instructions provided with the product. For warranty and service questions please contact OXO customer service.

SATISFACTION GUARANTEE

OXO offers a 60 day satisfaction guarantee.

REGISTRATION

We need to reach you in the event of a recall or safety alert! If you are a U.S. or UK resident, please complete the enclosed, self-addressed postage-paid card. All international and U.S. residents can also register online at www.oxotot.com.

CONTACT US

If parts are missing, damaged or broken, for replacement parts or to report a problem, contact:

OXO U.S. Customer Service

Hours: Monday – Friday, 8:00am – 5:00pm (ET)

Phone: (800) 545-4411

Fax: (717) 709-5350

Mail: OXO International, Inc. at 1331 S Seventh St. Ste 202, Chambersberg, PA 17201-9912

Email: info@oxo.com

Website: www.oxo.com

OXO UK Customer Service

Hours: Monday – Friday, 9:00am – 5:00pm

Phone: 0114 290 1455

Fax: 0114 242 0406

Mail: OXO Customer Service, Helen of Troy House, 1-4 Jessops Riverside, 800 Brightside Lane, Sheffield. S9 2RX

Email: info@hot-uk.co.uk

Website: www.oxo.com

Outside the U.S. and UK

Please contact your local distributor or email info@oxo.com

www.oxo.com

OXO®, OXO Tot™, Nest™ and related logos are trademarks of Helen of Troy Limited.
In the United Kingdom and Ireland, OXO is a registered trade mark of Premier Foods plc and used under licence.
©2014 OXO. Illustration by Petit Collage.

